

Radio Mobile 'Quick Start'

I can be contacted at E-mail address: - web@g3tvu.co.uk

Introduction:-

I found that when introducing my friends to **Radio Mobile**, that they had difficulty in setting up their first map and network to obtain an initial working display. The following is a description of a simple network setup, complete with a complimentary set of self-installing files (which includes the required height - SRTM - data) to produce my Base network.

For those of you who don't believe that **Ashbourne** is the centre of the world, you can enter your own Latitude and Longitude data in the 'Map Properties' window to give your local map **after installing the 'Base' network**, with the program downloading your new SRTM data from the Internet as required. (You will also have to change the 'Options/Internet' - 'Internet FTP directory' address if you are located outside of Eurasia!), but see this **Notes** section and the '**Base Network Settings**' page or this link to help '**Changing Location**' and for extra information and hints on some shortcuts. The 'Map Properties' window also has a 'Select City Name' button, which enables the automatic entry of Lat/Long data for that City as the new map centre point. To see where the settings for the Base Network are made, open the '**Base Network Settings**' page.

I have also produced a second page '**Once you get going**' which shows how **extra Units** can be generated, and other pages showing some of the facilities available from the **Radio Link** window, and how to perform **Radio Coverage Plots**. This page is available in .pdf format (654Kb) [here](#), but may not show the most recent version of **Radio Mobile** in the screenshots. It is worth browsing this and the following page to explore some of the many facilities available from within the program.

A further page showing how to '**Find Best Sites**' for a radio repeater network is also available, and a new feature from version 7.1 is a '**Route Radio Coverage**' facility. This enables the performance of a fixed station to mobile station link to be evaluated in either direction as the mobile station traverses a predefined route.

Note:

This program uses the '**WGS-84 datum**' Latitude & Longitude data for position location.

UK users - please note that this is different to the Ordnance Survey OSGB-36 datum!

Jeff, G8HUL, has written a **NGR Converter** which shows **UK NGR coordinates**, and also an Irish Grid converter available from the above link, which work from the cursor position of V8.4.5 and up of RM. He also provided a stand alone Lat-Long converter for NGR/WGS-84 conversions.

(Look at my **Importing Pictures** page showing the use of **Gartrip** for other National coordinate conversions).

(As an alternative for conversion from OSGB-36 to WGS-84 datum try <http://www.nearby.org.uk/coord.cgi>)

First:-

There are a number of concepts which need to be understood when setting up and running the program. A radio station is referred to as a **Unit**, there can be numerous Units defined to operate within a given **Network**. Each different **type** of Unit used in a network has to be defined with a separate **Radio Operating System** specification, this sets up the radio parameters for that **type** of unit, i.e. Transmit Power/receiver sensitivity/antenna gain/antenna height/cable losses. Thus each Unit will be allocated to an operating **Radio System** specification within the network. Finally, all units are given a **Role**, which is either **Command, Subordinate or Rebroadcast**. The effect of this is to set which links are shown on the network display - in my case, Base is specified as command, and all other Units as Subordinate - so links are shown between Base and the other Units only. Links between other pairs of stations can still be evaluated via the '**Radio Link**' pane.

Don't forget :-

<u>UNIT</u>	<i>This is an <u>actual</u> radio station which can be placed on the map, its radio performance specification is given by its allocated Radio Operating SYSTEM.</i>
<u>SYSTEM</u>	<i>This is a set of specific parameters defining the performance of a particular <u>type</u> of radio station.</i>
<u>NETWORK</u>	<i>Defines a specific group of radio stations which are required to intercommunicate.</i>

1 Program setup.

For old versions of Windows, and **Linux machines running Wine**, first download Visual Basic Runtime (Service Pack 6) from Microsoft (VB6.0-KB290887-X86.exe) from [here](#). This has to be installed on your machine by a double click on the file name after downloading, before any other files are installed. This may require a system reboot after installation, but the file can then be removed.

I have produced the file '[Radio Mobile Setup.zip](#)' which is an installation file, in zip format, generated by freeware. This freeware only generates an information pane after completing the installation process which can be exited, it doesn't add anything else to your computer. It will generate a new folder to hold your **Radio Mobile** files at '**C:\Radio Mobile**'. This location can be changed** if required during the installation, and a desktop icon shortcut for the program will be generated.

An uninstall function is also present. See below for a '[Walk Through](#)' of the installer panes.

**** It is recommended however, that the folder above is used for the installation, as all internal program links will have to be changed to make the program operate from a different location!**

Thanks to Roger, from Version 7.9.9, my installation file sets up all the data paths below to their default locations, but it is advisable to check that they are in place to become more familiar with the available setup options.

If you make the installation to your own Folder location, you will have to modify these data paths to reflect this using the panes as shown on the [Base Network Settings](#) page.

The changes required are shown in the *Blue notes.

Please note that with VISTA, you have to have Administrator privileges, and change the Security settings to allow full control and modification of RMW.ini - the setup file.

2 Download my exe file.

My exe file (in zip format ~ 3.4MB) contains all the data required for the '**Base**' Network and Roger's system files, this should be downloaded, unzipped, and run with a 'double click'. The height data is contained in the file named 'N53W002.hgt', which will be placed in a new folder called 'SRTM' in the Radio Mobile folder. This SRTM folder will be used to hold all additional download data for your area later - i.e. located at 'C:\Radio Mobile\SRTM'. Ensure that no other instances of rmwdlx32.dll exists on your system. If you want to put the program at more than one location, you should put rmwdlx32.dll in C:\Windows\System - (C:\Winnt\System32 for NT).

These files are correct at the 24th July 2009

with version 10.0.4

Note: My installer generates the **English Language** version of the program,

for **Brazilian Portuguese, Dutch Flemish, French, German, Greek, Italian, Russian, Spanish** and **Turkish** language versions see Roger's [Download](#) page.

To modify my installed files to another language, extract the language version you prefer into the Radio Mobile folder, then delete any files with '***eng' as their name - you will also have to point the program shortcuts to your new language version ***.exe!

My 'Radio Mobile Setup.exe' file is available here. in zip format



3 Installing Radio Mobile.

Extract '**Radio Mobile Setup.exe**' from its zipped file, and a double click on it will start the installation process.

Important Note:

To activate the 'Merge' Internet download links from GoogleMap, MapPoint, MapQuest, Virtual Earth, and Yahoo Map, the file 'Map_Link.txt' has to be viewed. This file contains links to the legal requirement for access to, and use of, the data from these servers. If you agree to the conditions, you can modify and save the file as per the contained instructions which will provide access. The file resides in the root of the Radio Mobile folder. During installation you have the option to view the file, and if you agree to the terms, you can modify and save it before completing installation.

Walk Through:

For a 'walk through' of the installation pane sequence,

click here for the 'Installation' page.




(Use Back, or the link to return)

'Up' shows the Contents page.

After installation, the shortcut for 'Radio Mobile'  will be found on your Desktop.

Open the program with a 'double click' on this shortcut, (or from Start/Programs/Radio Mobile), and the **Radio Mobile** window will open showing my '**Base**' network (title \base.net).

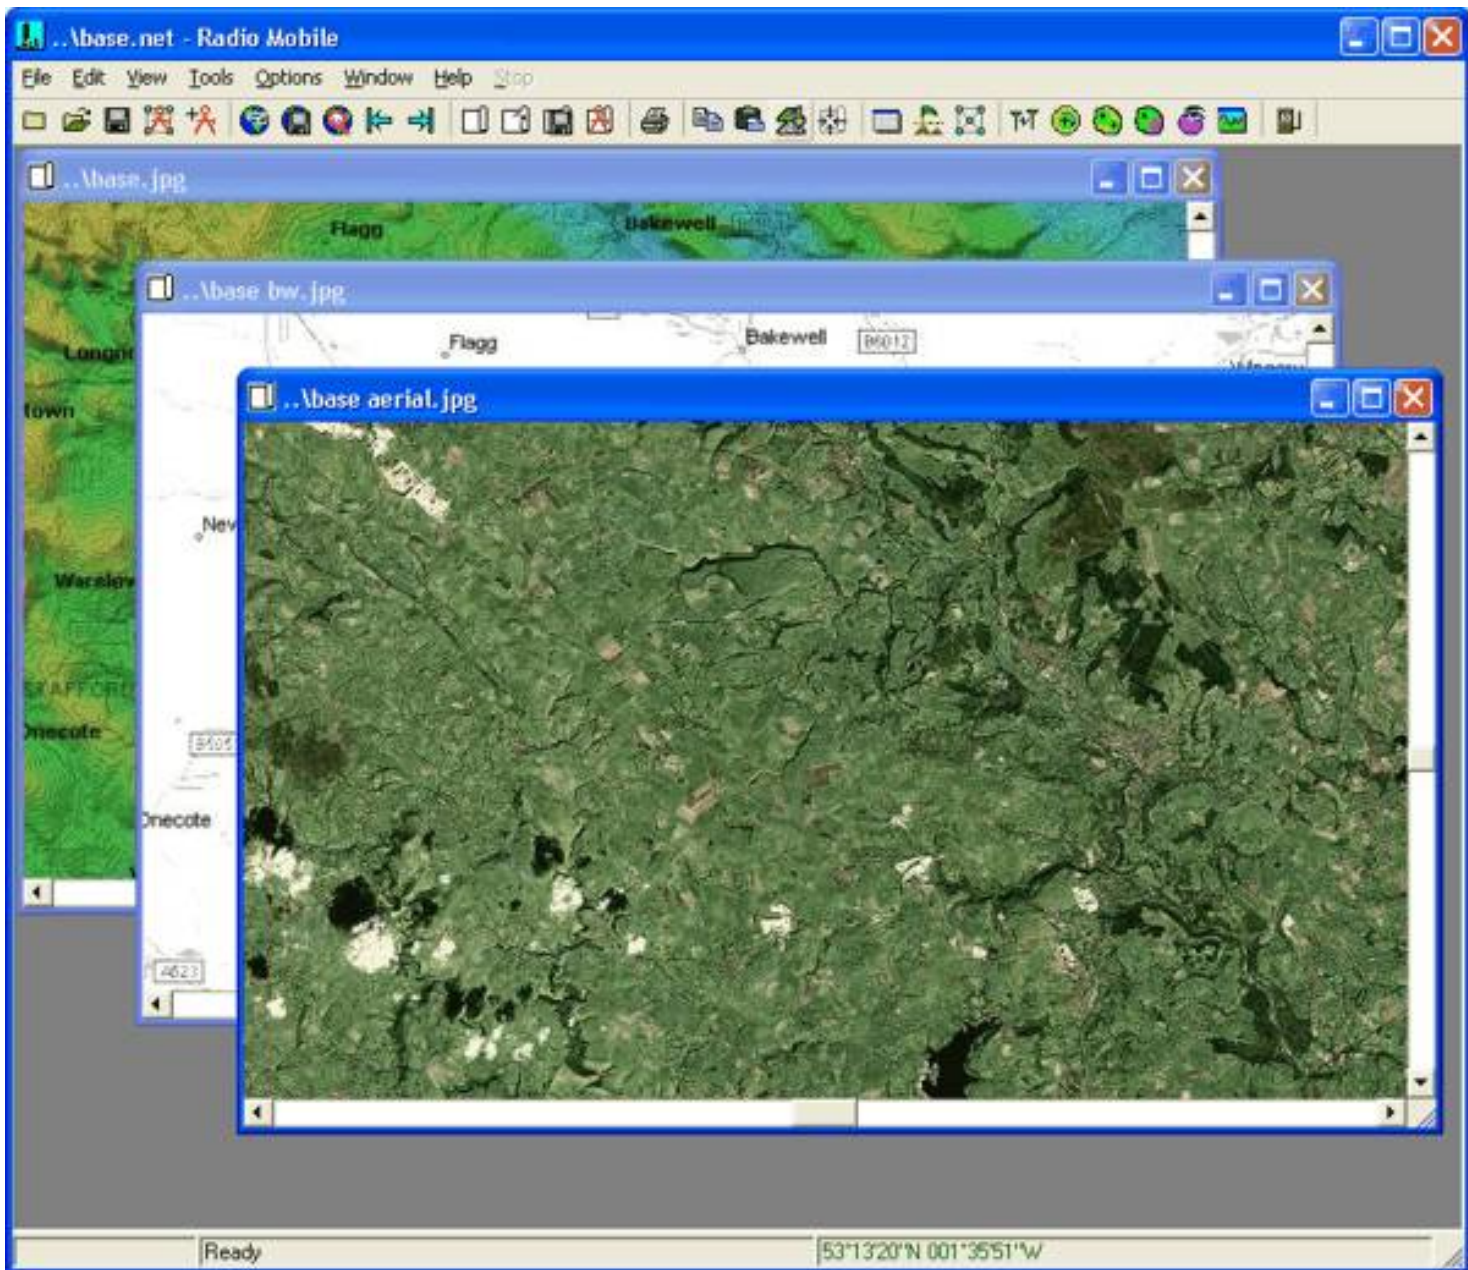

There are three panes displayed showing part of the UK Peak District which are:-

- a) **'base.jpg'** which is an elevation map to which 10m Contours and Distance scale have been added, kept in the picture, then **merged**/multiply with another picture, 'base bw.jpg', and saved.
- b) **'base bw.jpg'** a downloaded Road map which has been modified to remove detail and changed to Black & White.
- c) **'Base aerial.jpg'** which is an aerial photograph of the map area downloaded from the internet.

(* For more information on Merging Pictures see [▶ Merging Pictures](#))

This has now produced the working Network!

The working **Base Network** consists of three **Units** configured in a **VHF network** - a **Base Unit**, a **Mobile Unit** and a **Hand Held Unit**. The actual operating parameters used for these different radios are shown in their respective **Radio Operating Systems** - these can be examined on the '[Base Network Settings](#)' page.

The following actions give a quick view of some features available in this working network after enlarging a picture to Full Screen:


If you don't see a particular icon on the Toolbar, open '[Options/Toolbar](#)' (or right click on the toolbar) to open a Tool selection pane. This pane and the function of the various icons can be seen on my [Toolbar Icons](#) page.

Use these quick links for additional information - using your browser 'Back' button to return here - or just browse down the page.

View the Radio Network	View Units Only	Moving Units
Examine a Radio Link	Display the Elevation Grid	Changing Location
Area Zoom	'S' Unit settings	Base Network Format
Maps	World Map	Program Help files
Extra Network folders	Custom antenna patterns	Problems?

To view the Radio Network

on the map, click on the Toolbar Icon:

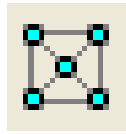

The Units and network radio paths will be displayed. The radio path colour indicates each radio link performance, with **Green for signals $\geq +3\text{dB}$** ref. the Rx threshold, **Yellow for signals in the range of $+3\text{dB}/-3\text{dB}$** , and **Red for signals $< -3\text{dB}$** relative to the Receiver threshold. These threshold levels can be modified if required from the Style settings, as shown on [Network Styles](#).

To view the Units only

on the map, click on the Toolbar icon:



 
and the units will be shown at their locations on the map or picture

To move a Unit,

Left click on the new location required to generate a red crosswire cursor crossing point, and then right click on the Unit to be prompted to move it to the cursor position.

To examine a Radio Link,

Using '**F2**' or a click on the Radio Link icon,



(or using Tools/Radio Link), will open the **Radio Link** pane, showing the path profile and parameters between selected Units. (See the [Radio Link](#) page for more information on the features available).

It is now a worthwhile exercise to see where information is available, and can be changed for this Network to make it match your own requirements.

*Click this link to examine the '[Base Network Settings](#)' page, and then go to '[Once you get going](#)' to find out how to **move**, **rename** and **add** additional **Units**.*

If you wish at this stage to move the map to your own location see the '[Changing Location](#)' page.

*To explore many of the other features available from within **Radio Mobile**, these are described on the [RM Contents](#) page and available from there, or by the buttons below.*

Notes:

Elevation Grid:


There are many shortcuts available in the program which need to be explored. Clicking on a map produces the Elevation Grid centred on the red cross wire cursor position, if it does not appear, check 'View/Elevation grid,

or click on the the Toolbar Icon



The red crosswire cursor can be moved on screen by using the keyboard arrow buttons, or a click in an elevation grid box height window will also move the cursor to that position.

A click on the small arrow button at the lower right of the Elevation Grid display, opens an enlarged view window of the area round the cursor cross point - the cursor coordinates are also displayed.

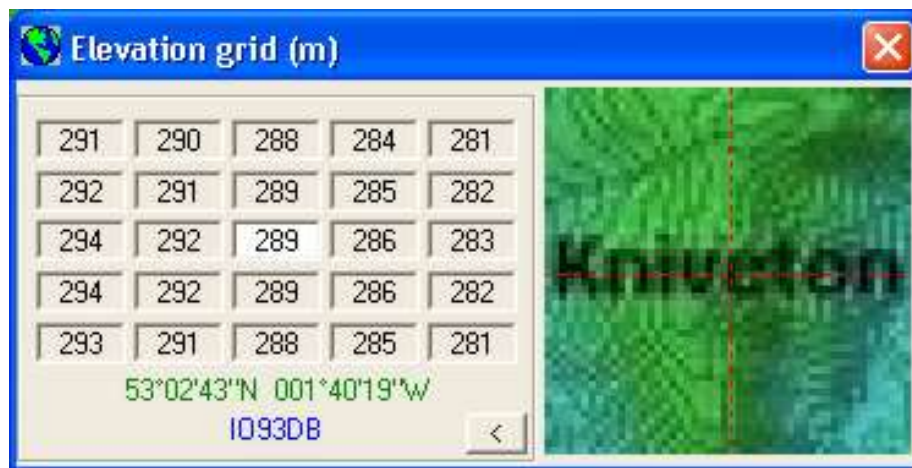

A 'Right Click' on any unit produces a prompt to move the Unit to the Cursor position - or a 'Left Click' produces the 'Unit Properties' screen.

Changing Location:

[See my 'Changing Location' page here.](#)

If the map area/location is changed (You will also have to change the 'Options/Internet' - 'Internet FTP directory' address if you are located outside of Eurasia!), and the original files are to be retained, remember to save all files using 'Save as' under a **New Name** including the Network, or the original files will be overwritten. After producing a new map, click where you wish to place the Base Unit to produce the red cross wire cursor, then open 'Unit Properties' and click 'Place Unit at Cursor position' to place it on the map. Repeat for the other Units before saving the Network. (It is worthwhile checking the window panes under 'Window' and closing any of my original 'base network' windows remaining before saving the Network under your new name).

All the unit Systems, names and locations can be changed to suit your own requirements by using the windows shown on the [Base Network Settings](#) page.

Area Zoom:

A 'Left Click' and drag on a map produces a marquee box, right click in this area enables a zoom of the area to be produced which can be saved as a 'New Picture'. This picture then can be merged with new data from the source at higher resolution, then saved if required. (For more information see the [Merging Pictures](#) page).

S Unit settings:

S-Unit values can be modified in the '[Options/S-Unit](#)' window, which I use as the IARU Region 1 Standard.

Base Net Format:

This Network was produced at 800x600 pixels, and pictures saved in ***.jpg format to reduce file sizes. The reason for my Base Station being at the bottom of the map is to have all the units on one SRTM tile - where I live requires four tiles for the Base unit to be centralised!

Maps:

Map Properties can be changed to suit, with a size to over 2000 pixels square (dependant on your computer capability), and Lat/Long changed for your location. The Black and White road map is a very useful tool for coverage and Field Strength plots, as rainbow elevation colours - or sometimes greyscale - can obscure the colour changes.

World Map:

Opening 'View/World map' will show a map where the required map centre can be selected. Using 'View/Swap World map' will then show a road map of the UK - a double click on a location on either map opens up '**Map Properties**' with the cursor cross wire Lat/long entered. This enables the map area to be moved - but see [Changing Location](#) for a full description. This alternate UK map can be changed for one of your own region by replacing Wmap.jpg (or in .bmp format) in the root directory, but retain the same names - or disabled by removing or renaming them.

Program Help Files:

If you wish to look at the program Help files for additional information, they are available on the [RM Downloads](#) page in .pdf format, or can be viewed here as web pages: - [Program Help Files](#)

Extra folders:

The **Base Network** specific files are contained in a folder 'C:\Radio Mobile\Networks\Base Network', and two additional empty Network Folders (2 and 3) are also available for use in this Network folder. By using these separate folders for each network, the network files and pictures are kept away from the program files, and similar names for pictures can be utilised without conflict.

Additional empty folders for DTED and all other data have been produced in the **Radio Mobile** folder, which need to be navigated to via the 'Internet Options' window if you haven't used the default folder location. A folder called '**Icon**' is available in which you can place additional icons that the program will access to represent Units. This folder is in the root of the Radio Mobile folder and contains some icons which can be changed or added to if required.

An additional SRTM-1 folder has been added for use if 1-arcsecond data is to be used. This has to be browsed to on the 'Options/Internet/SRTM' tab when a 1-arcsecond source is selected. The second level of data shown on the 'Map Properties' pane is set to this folder which can be selected if required.

Custom Antenna patterns:

If the selection of Antenna pattern files (contained in the 'Antenna' folder) do not suit your requirements, there are spreadsheets available on the RM Downloads page to generate your own - but also see [Antenna Plots](#) for a

description on how to use them.

*Installing '**Radio Mobile Setup.exe**' will produce a working network with all the settings made as the screenshots shown on the [Base Network Settings](#) page - this has been used successfully on many other computers, so should work on yours!*

Problems?

If so, please go through this check list first:-

- 1) *Is the correct Elevation Data Path set up in Internet Options?*

Check from [Base Network Settings](#)

- 2) *Is the correct Data path set up in Map Properties?*

If your machine freezes, make sure 'Ignore Missing Files' is checked.

- 3) *Can't get a Map when changing Location?*

Make sure you have selected your region for the SRTM data in 'Internet Options'.

- 4) *No Units?*

Make sure that you have units enabled in both Network and Unit Properties.

Use 'Move Unit to Cursor position' in 'Unit Properties' to place units on your map locations.

- 5) *Can't get rid of my network?*

When you have generated your own network, cycle through all the windows,

closing those which don't apply to it. Then save the map, all pictures and network

under your new names.

- 6) *You can see the QRA locator reference and require another reference - see [Notes](#).*

- 7) *If you are unable to 'merge' pictures from external sources*

read this 'Important Note'.

This page is available in .pdf format here

If you have any other Queries, or Suggestions for improving this Guide, please post them to me at

web@g3tvu.co.uk

Finally, after reading all this, I hope it will help you start to explore the capabilities of Radio Mobile, and realise what a great program Roger has produced and released with continuous support for our benefit!

- [▶ Quick Start](#)
- [▶ Base Network Settings](#)
- [▶ Once you get Going](#)
- [▶ Radio Link](#)
- [▶ Radio Coverage](#)
- [▶ Route Radio Coverage](#)
- [▶ Split Route Coverage](#)
- [▶ Best Sites - Network](#)
- [▶ Best Sites - Waypoints](#)
- [▶ Changing Location](#)
- [▶ Merging Pictures](#)
- [▶ Antenna Alignment](#)
- [▶ Object Editor](#)
- [▶ Fox Hunt](#)
- [▶ Importing Pictures](#)
- [▶ Export/Import Units](#)
- [▶ Large Maps](#)
- [▶ Antenna Plots](#)
- [▶ Antenna Viewer](#)
- [▶ Land Cover](#)
- [▶ Visual Coverage](#)
- [▶ Network Style](#)
- [▶ Installation](#)
- [▶ How to...](#)

[▶ RM Downloads](#)

[▶ RM Contents](#)

Please keep checking back for updates/additions.

[Top of Page](#)

© Copyright G3TVU

24th July 2009